

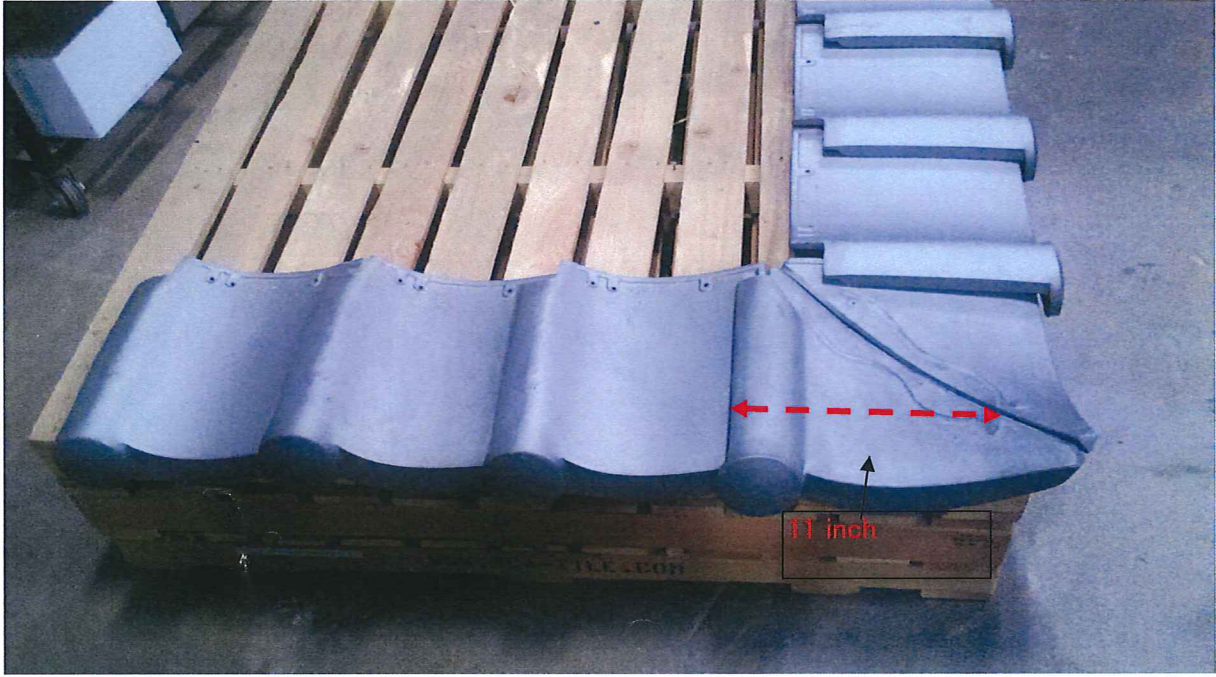


How to Install Oriental Eave Tile Without Cutting

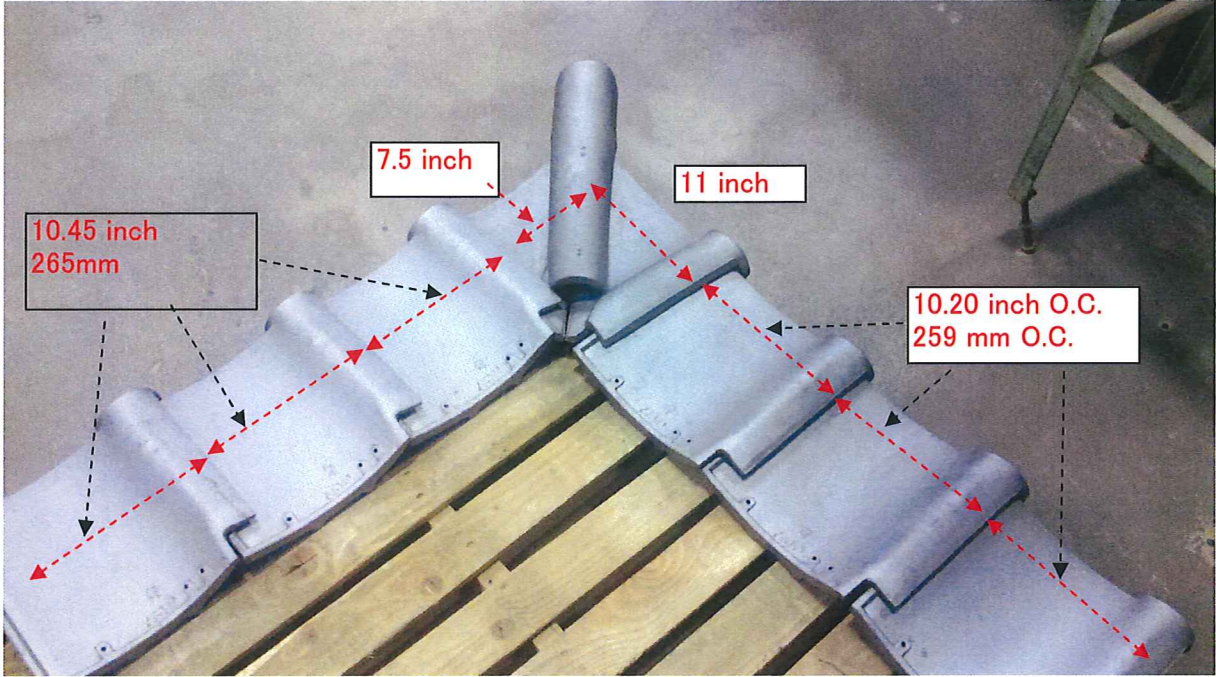


16 feet run eave tile layout

$$16 \times 12 \text{ inch} = 192 \text{ inch. } 192 \text{ inch} - 11 \text{ ''} - 7.5 \text{ ''} = 173.5 \text{ ''}$$
$$173.5 \text{ ''} \div 10.5 = 16.75 \text{ (17 pcs)}$$
$$173.5 \text{ ''} \div 17 \text{ pcs} = 10.205 \text{ inch On Center}$$

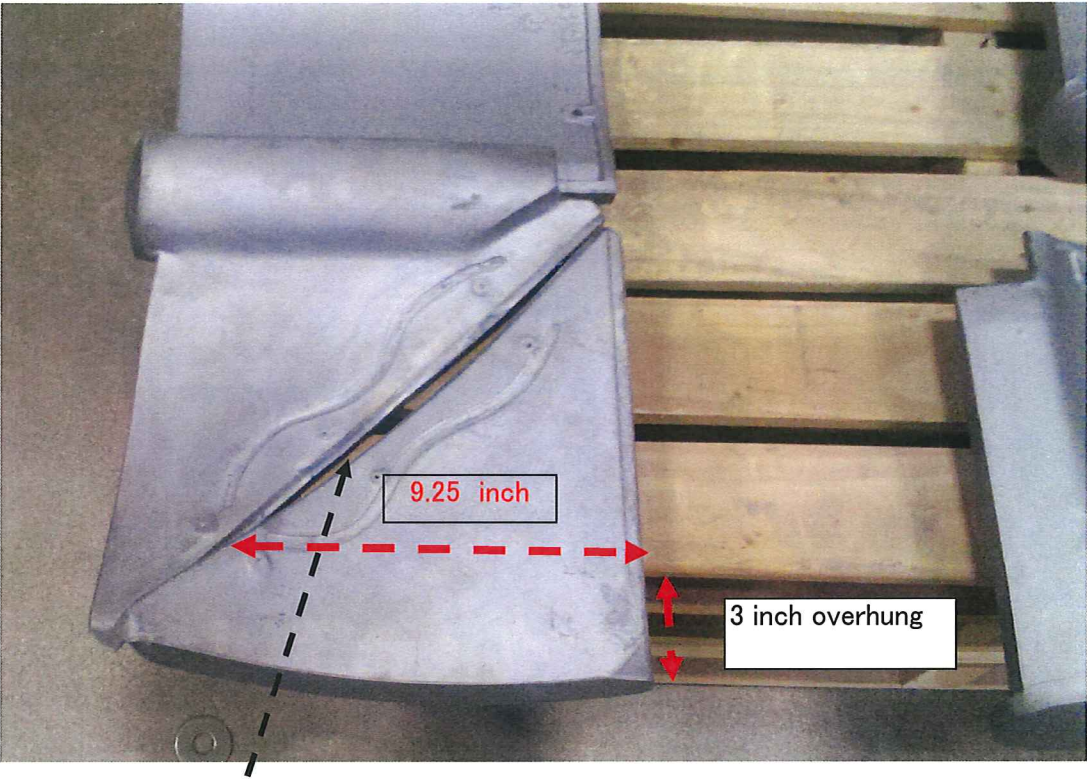

Adjust here to fit tile.

Please make sure set up 3 inch overhung position

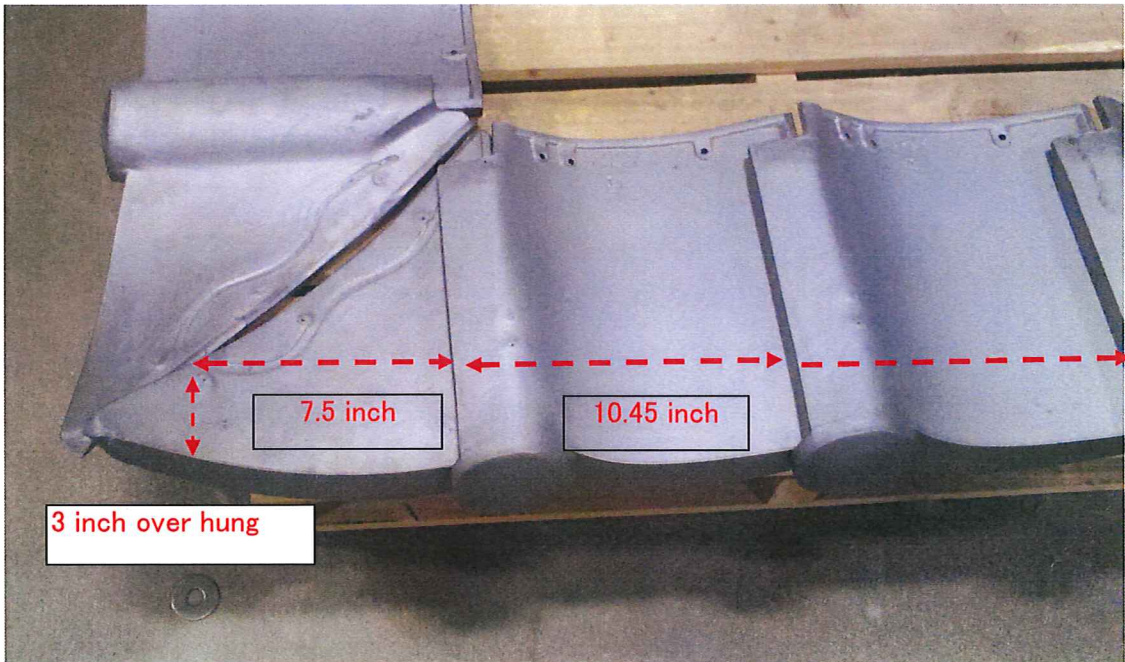

12 feet run eave tile layout

$$12 \text{ feet} \times 12'' = 144''$$

$$144'' - 7.5 \text{ inch} - 11\text{-inch} = 125.5 \text{ inch. } 125\text{inch} \div 10.5'' = 11.95 \text{ pcs (12pcs)}$$

$$125.5'' \div 12 \text{ pcs} = 10.45'' \text{ On Center}$$